


Mercedes Sprinter Hi Roof 1996 — 1999 Model

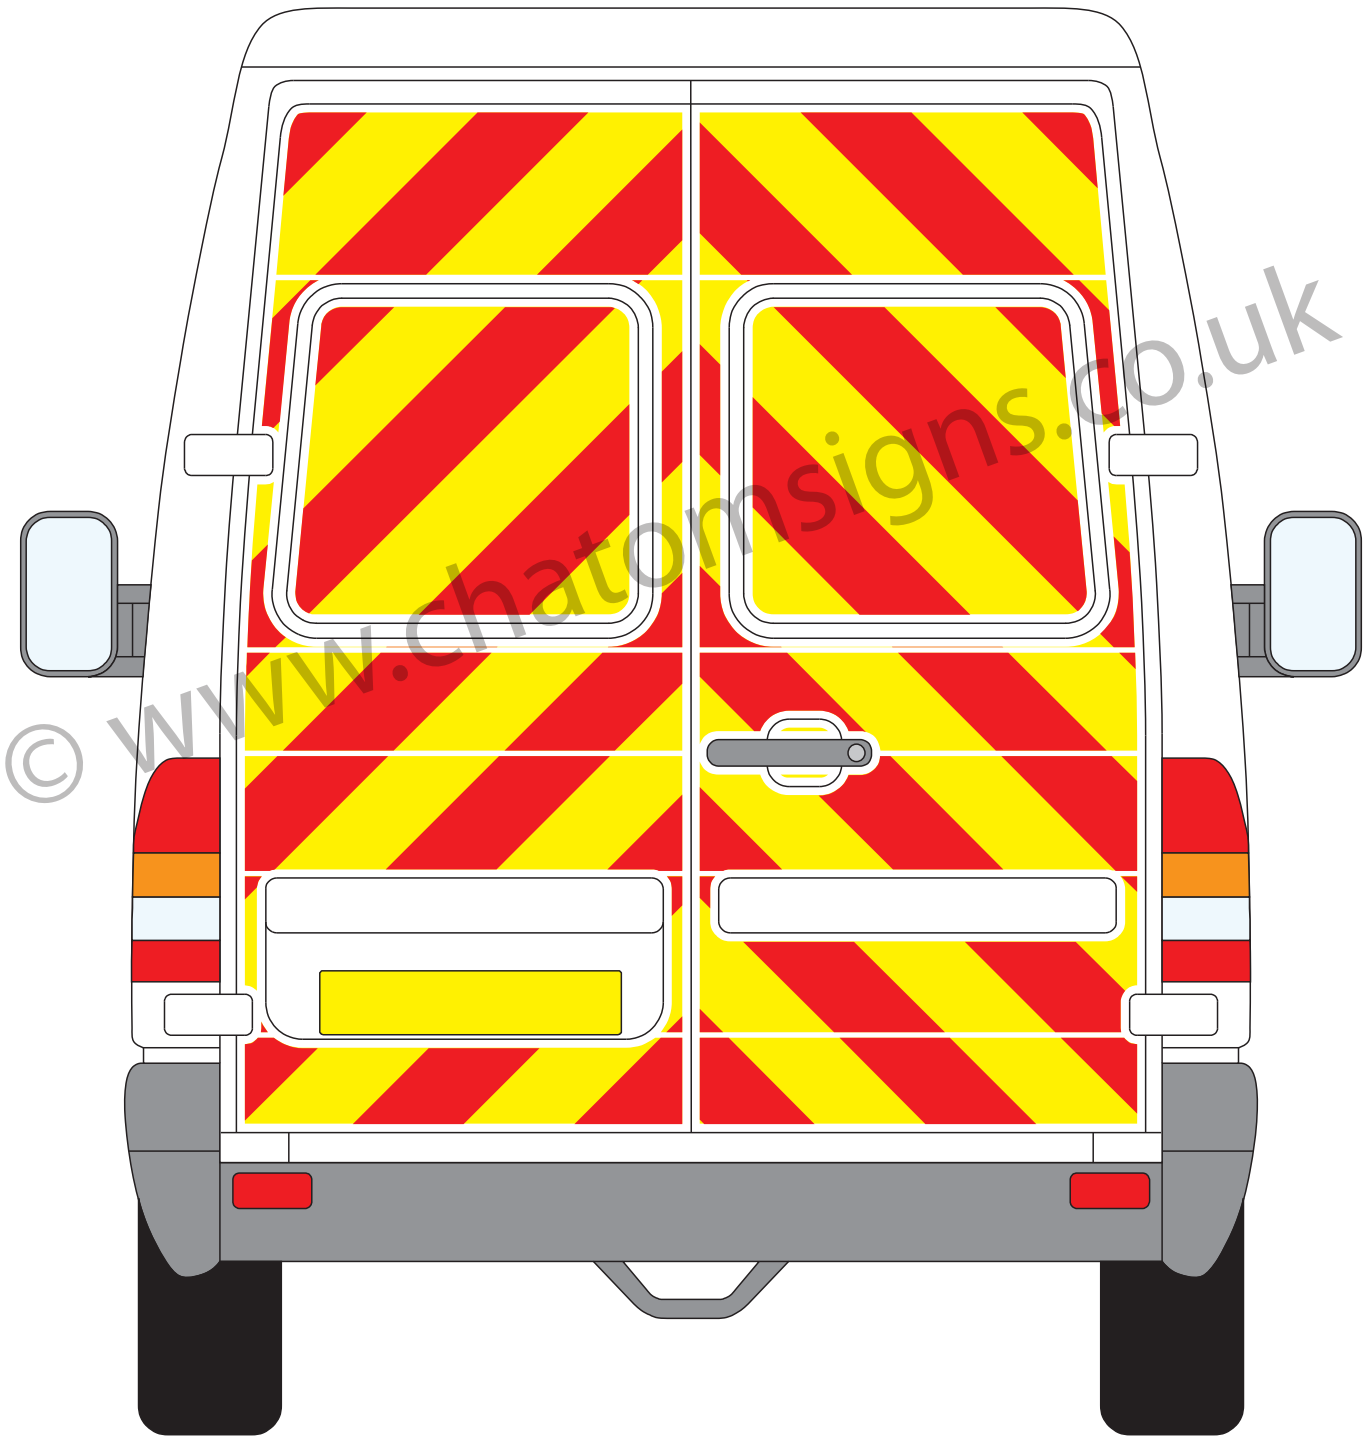

Full chevron kit